

CD Soundmachine

AZ-2050 · AZ-2055

Audio

STOP!

Need help? Call us!

Philips representatives are ready to help you with any questions about your new product. We can guide you. If you have any problems, Philips Representatives can through Connections, First-time Setup, or any of the Features. We want you to start enjoying your new product right away!

**CALL US BEFORE YOU CONSIDER
RETURNING THE PRODUCT!**

1-800-531-0039

or

 
Visit us on the web at www.philips.com

IMPORTANT!
Return
your Warranty
Registration Card
within 10 days
SEE WHY INSIDE




**Remote Control for
AZ2055 model only**

PHILIPS

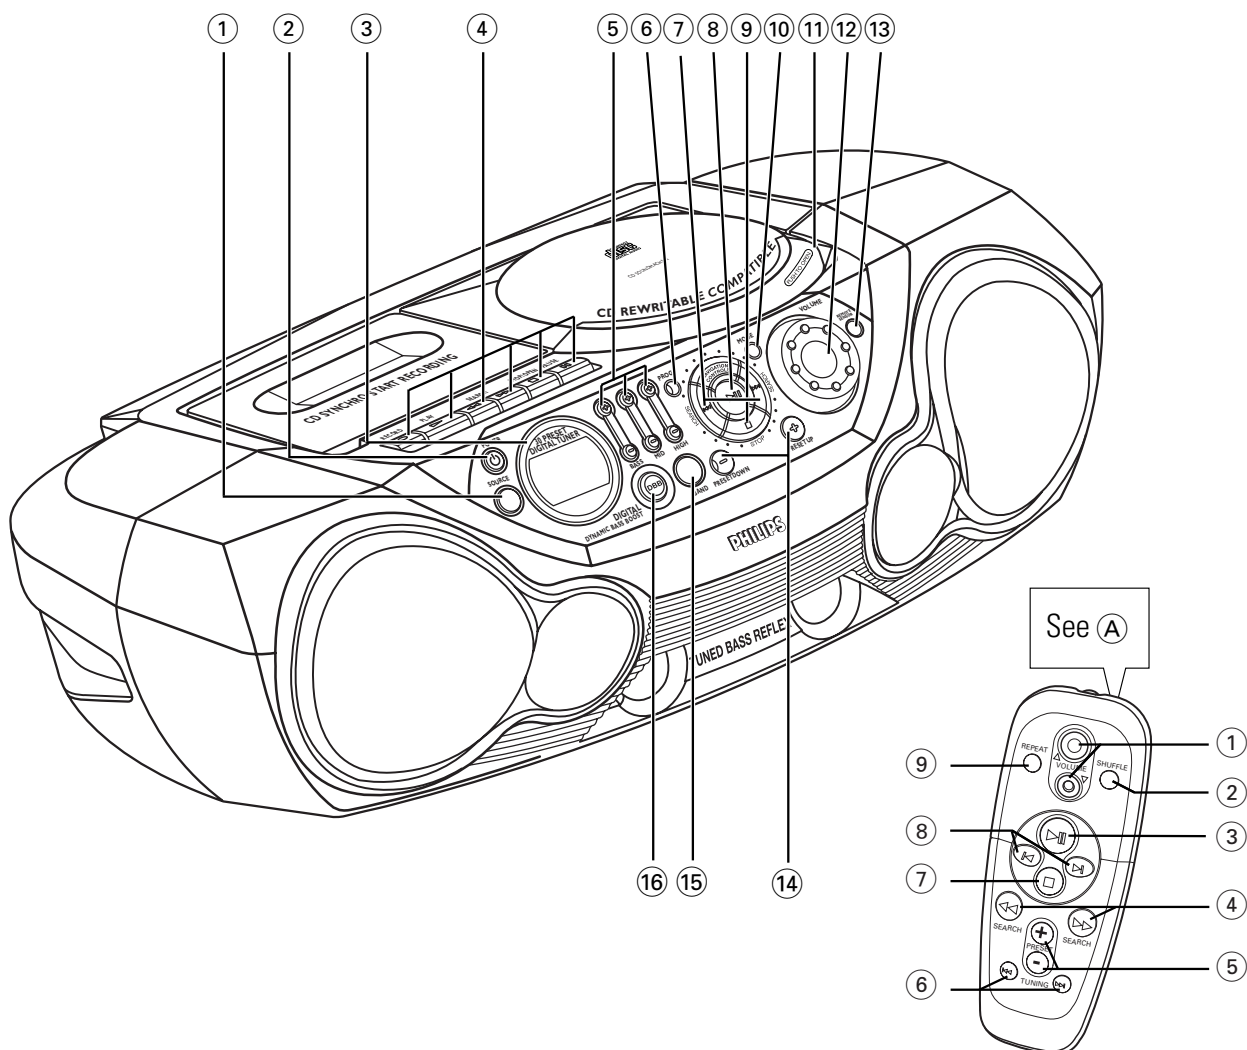

 
**Remote control
for AZ2055 model only**

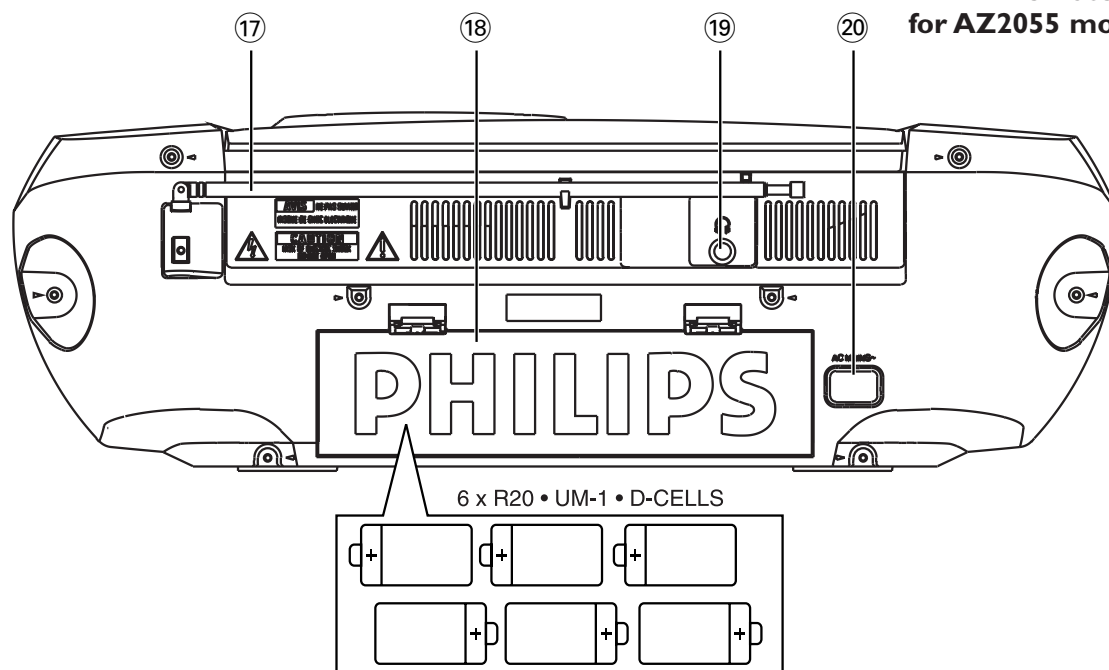




2



 
5

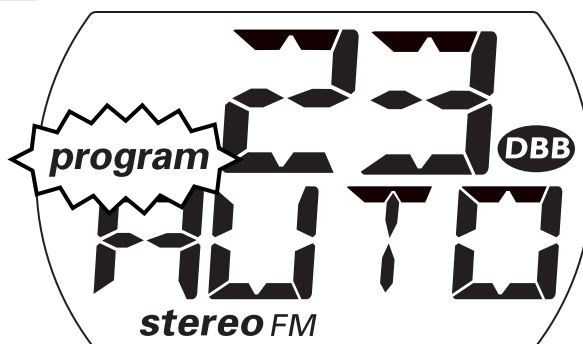


3

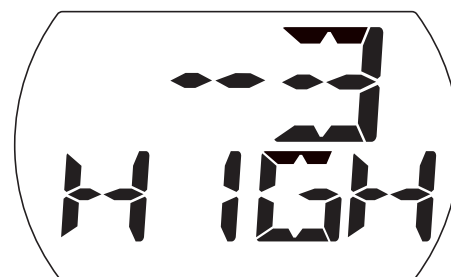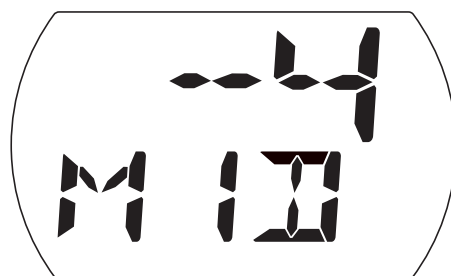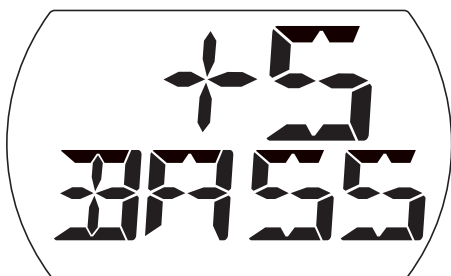   


6

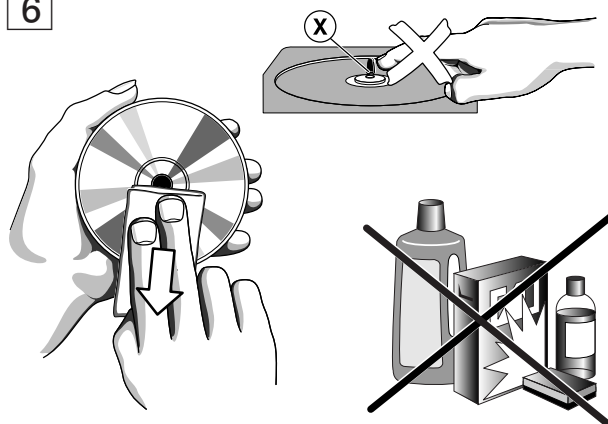 


7

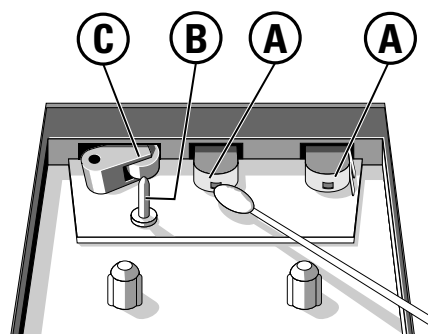 

4

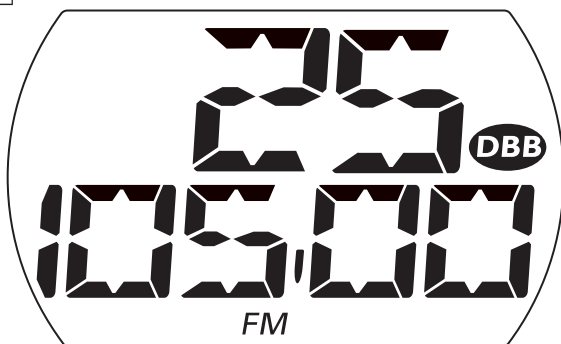 

A

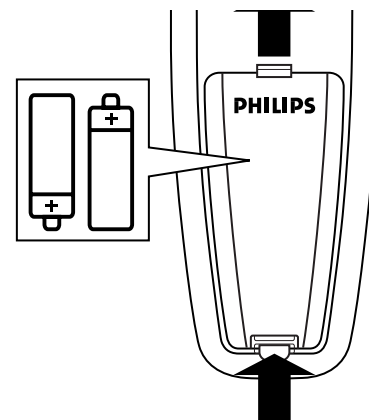 

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips warranty.

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these
safety symbols



This “bolt of lightning” indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the bottom of the cabinet. Retain this information for future reference.

Model No. _____

 
Serial No. _____


WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

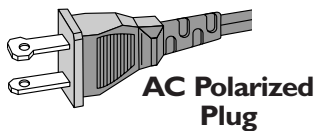

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install **all** batteries correctly, **+** and **-** as marked on the unit.
 - Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).
 - Remove batteries when the unit is not used for a long time.

EL 6475-E004: 02/8

Class II equipment symbol



This symbol indicates that the unit has a double insulation system.

LIMITED WARRANTY

PORTABLE AUDIO

90 Days Free Exchange

This product must be carried in for an exchange.

WHO IS COVERED?

You must have proof of purchase to exchange the product. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, a defective or inoperative product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Magnavox.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product used for commercial or institutional purposes.

WHERE IS EXCHANGE AVAILABLE?

You may exchange the product in all countries where the product is officially distributed by Magnavox. In countries where Magnavox does not distribute the product, the local Magnavox service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

BEFORE REQUESTING EXCHANGE...

Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact 1-800-705-2000 to arrange an exchange. Or, ship the product, insured and freight prepaid, and with proof of purchase enclosed, to the address listed below.

Magnavox Exchange Program
Suite A
406 North Irish Street
Greeneville TN 37745

(In U.S.A., Puerto Rico, and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

EXCHANGING A PRODUCT IN CANADA...

Please contact Magnavox at:

1-800-661-6162 (French Speaking)
1-800-705-2000 (English or Spanish Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Magnavox is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

NOTES

This product complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and*
- 2 This device must accept any interference received, including interference that may cause undesired operation.*

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

L'appareil répond aux normes FCC, Part 15 et 21 CFR 1040.10. Fonctionnement soumis aux deux conditions suivantes:

- 1 Cet appareil ne doit pas provoquer d'interférences nuisibles, et*
- 2 Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement peu satisfaisant.*

CAUTION

 
L'emploi de commandes, de réglages ou l'application de procédures autres que ceux mentionnés dans ce manuel peuvent occasionner des radiations d'exposition ou un fonctionnement dangereux.

El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10. Funcionamiento dependiente de dos condiciones siguientes:

- 1 Este aparato no puede provocar interferencia dañina, y*
- 2 Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.*

ATENCIÓN

El uso de mandos o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.



English

CONTROLS

BASIC FUNCTIONS

DIGITAL TUNER

TOP AND FRONT PANELS

- (See [1])
- ① **SOURCE** – selects CD/ TUNER / TAPE function
 - ② **⏻** – power on/ off switch
 - ③ **Display** – shows the status of the set
 - ④ **Cassette recorder keys**
 - RECORD ●** – starts recording
 - PLAY ►** – starts playback
 - SEARCH ◀▶** – fast winds/rewinds tape
 - STOP/OPEN ■▲**
 - opens the cassette compartment
 - stops the tape
 - PAUSE II** – pauses playback or recording
 - ⑤ **BASS, MID, HIGH** – EQ keys to adjust the bass, mid & treble frequencies
 - ⑥ **PROG**
 - CD:** programs tracks and reviews the program;
 - Tuner:** programs preset radio stations
- Navigation controls**
- ⑦ **◀◀, ▶▶**
 - CD:**
 - searches back and forward within a track;
 - skips to the beginning of a current track/previous/ later track
 - Tuner:** – tunes to radio stations (*down, up*).
 - ⑧ **►II** – starts or pauses CD playback
 - ⑨ **■** – stops CD playback;
 - erases a CD program
 - ⑩ **MODE** – selects different play modes:
 - e.g. **REPEAT** or **SHUFFLE** (random) order
 - ⑪ **PUSH TO OPEN** – opens/closes the CD door
 - ⑫ **VOLUME** – to adjust volume level
 - ⑬ **REMOTE SENSOR** (*for AZ2055 model only*) – infrared sensor for remote control
 - ⑭ **PRESET DOWN/ UP (–, +)** – selects a preset tuner station (*down, up*)
 - ⑮ **BAND** – selects waveband
 - ⑯ **DBB** – (Dynamic Bass Boost) activates a more vivid bass response

BACK PANEL

- ⑰ **Telescopic antenna** – improves FM reception
- ⑱ **Battery compartment** – for 6 batteries, type R-20, UM1 or D-cells
- ⑲ **🎧** – 3.5 mm stereo headphone jack
 - Note: The speakers will be muted when headphones are connected to the set.*
- ⑳ **AC MAINS** – inlet for power cord

REMOTE CONTROL (*for AZ2055 only*)

- ① **VOLUME ▲, ▼** – adjusts volume level (*up, down*)
- ② **SHUFFLE** – plays all CD tracks in random order
- ③ **►II** – starts/ pauses CD playback
- ④ **SEARCH ◀◀, ▶▶** – searches backwards/ forwards within a track
- ⑤ **PRESET +, –** – selects a preset radio station (*up, down*)
- ⑥ **TUNING ◀◀, ▶▶** – tunes to tuner stations (*down, up*)
- ⑦ **■** – stops CD playback;
 - erases a CD program
- ⑧ **◀, ▶** – skips to the beginning of a current track previous/ subsequent track
- ⑨ **REPEAT** – repeats a track /program/ entire CD

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

POWER SUPPLY

Whenever convenient, use the power supply to conserve battery life. Make sure you remove the power plug from the set and wall outlet before inserting batteries.

Batteries (*not included*)

- Insert 6 batteries, type **R-20, UM-1** or **D-cells**, (preferably alkaline) with the correct polarity.
- Remote control (*for AZ2055 only* /See [A])**
- Insert 2 batteries, type **AAA, R03** or **UM4** (preferably alkaline).

Incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst.

- *Do not mix battery types:* e.g. alkaline with carbon zinc. Only use batteries of the same type for the set.
- When inserting new batteries, do not try to mix old batteries with the new ones.
- **Batteries contain chemical substances, so they should be disposed of properly.**

Using AC Power

- 1 Check if the power supply, as shown on the **type plate located on the bottom of the set**, corresponds to your local power supply. If it does not, consult your dealer or service center.
- 2 If your set is equipped with a voltage selector, adjust the selector so that it matches with the local power .
- 3 Connect the power cord to the wall outlet.
- 4 To disconnect the power supply, unplug the set from the wall outlet.

Auto-Standby mode

When a CD or tape has reached the end of playback and remains in the stop position for more than 15 minutes, the set will switch off automatically to save energy.

The type plate is located on the bottom of the set.

BASIC FUNCTIONS

- Switching on and off and selecting function**
- 1 Press **⏻** on the set to switch on.
 - 2 Press **SOURCE** once or more to select: **CD, TUNER** or **TAPE** function.
 - 3 Press **⏻** to switch off the set.
- Notes:**
- *To change from TAPE to TUNER or CD function, or when you are switching off the set: first, make sure you press the tape STOP ■ key to end playback and all the cassette keys are released.*
 - *The tone, sound settings, tuner presets and the volume level (up to a maximum volume level of 20) will be retained in the set's memory.*

Adjusting volume and sound

- 1 Adjust the volume with the **VOLUME** control.
 - Display shows the volume level and a number from 0-32. (See [2])
- 2 Press **DBB** once or more to select dynamic bass boost on or off.
 - Display: shows **DBB** when activated.
- 3 To adjust the bass, mid and treble tones, press and hold **+** or **–** on the **BASS, MID, HIGH** keys until you reach the desired level, **–5** to **+5**
 - Display briefly shows **BASS, MID, or HIGH** and the level. (See [3])

Note: To prevent sound interference the bass control options operate exclusively. You cannot combine the bass from BASS with DBB
→ *The display shows BASS or the DBB indicator is automatically switched off to remind you if you attempt to use both bass settings.*

DIGITAL TUNER

DIGITAL TUNER

Tuning to radio stations

- 1 Press **⏻** to on, then press **SOURCE** to select **TUNER**.
 - **TU** is displayed briefly and then the radio station frequency, waveband and, if programmed, a preset number are shown. (See [4])
 - 2 Press **BAND** once or more to select your waveband.
 - 3 Press and hold **◀◀** or **▶▶** until the frequency in the Display is **Erased** from Disc-Player.com Philips Manuals
- The radio automatically tunes to a station of sufficient reception. Display shows **Search**

CD

Autostore

Autostore automatically starts programming radio stations from preset 1. Available stations are programmed in order of waveband reception strength: FM, followed by AM. Any previous presets e.g. manually programmed will be erased.

- Press **PROG** for 4 seconds or more to activate autostore programming.
 - The display shows **AUTO, program** blinks, followed by the radio station details when stored. (See [5])

After all stations are stored, the first autostore preset station will then automatically play.

CD

Selecting a different track

- Press **◀◀** or **▶▶** on the set, once or repeatedly to select.
- In the pause/stop position, press **►II** to start playback.

Finding a passage within a track

- 1 Press and hold **◀◀** or **▶▶**.
 - The CD is played at high speed and low volume.
- 2 When you recognize the passage you want, release **◀◀** or **▶▶** to resume normal playback.

Note: During a CD program or if shuffle/ repeat active, searching is only possible within a track

CASSETTE RECORDER

Reviewing the program

In the stop position, press and hold **PROG** until the display shows all your stored track numbers in sequence.

Erasing a program

- You can erase the program by:
- pressing **■** twice
 - **CL** is displayed briefly and **program** disappears.
 - selecting **TAPE** or **TUNER** source.

CASSETTE RECORDER

Cassette playback

- erases a CD program
- 10 **MODE** – selects different play modes:
 - e.g. **REPEAT** or **SHUFFLE** (random) order
- 11 **PUSH TO OPEN** – opens/closes the CD door
- 12 **VOLUME** – to adjust volume level
- 13 **REMOTE SENSOR** (for AZ2055 model only) – infrared sensor for remote control
- 14 **PRESET DOWN/ UP** (–, +) – selects a preset tuner station (down, up)
- 15 **BAND** – selects waveband
- 16 **DBB** – (Dynamic Bass Boost) activates a more vivid bass response

DIGITAL TUNER

DIGITAL TUNER

Tuning to radio stations

- Press to on, then press **SOURCE** to select **TUNER**.
 - **TU** is displayed briefly and then the radio station frequency, waveband and, if programmed, a preset number are shown. (See [\[4\]](#))
- Press **BAND** once or more to select your waveband.
- Press and hold or until the frequency in the display starts running.
 - The radio automatically tunes to a station of sufficient reception. Display shows **Search** during automatic tuning.
 - If a FM station is received in stereo, **stereo** is shown.
- Repeat steps 2-3 if necessary until you find the desired station.
 - To tune to a weak station, press or briefly and repeatedly until you have found optimal reception.

To improve radio reception:

- For **FM**, extend, incline and turn the telescopic antenna. Reduce its length if the signal is too strong.
- For **AM**, the set uses a built-in antenna. Direct this antenna by turning the whole set.

Programming radio stations

You can store up to a total of 30 radio stations in the memory, manually or automatically (Autostore).

Manual programming

- Tune to your desired station (see Tuning to radio stations).
 - Press **PROG** to activate programming.
 - Press **PRESET DOWN/ UP** once or more to select a preset number.
 - Press **PROG** to confirm.
 - Repeat steps 1-4 to store other stations.
- Note: You can erase a preset station by storing another frequency in its place.*

procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

POWER SUPPLY

Whenever convenient, use the power supply to conserve battery life. Make sure you remove the power plug from the set and wall outlet before inserting batteries.

CD

Autostore

Autostore automatically starts programming radio stations from preset 1. Available stations are programmed in order of waveband reception strength: FM, followed by AM. Any previous presets e.g. manually programmed will be erased.

- Press **PROG** for 4 seconds or more to activate autostore programming.
 - The display shows **AUTO**, **program** blinks, followed by the radio station details when stored. (See [\[5\]](#))

After all stations are stored, the first autostore preset station will then automatically play.

To listen to a preset or autostore station

Press the **PRESET** (up or down) buttons once or more until the desired preset station is displayed.

CD PLAYER

Playing a CD

This CD player plays Audio Discs including CD-Recordables and CD-Rewritables.

- Press to on, then **SOURCE** to select **CD**.
 - **NO DISC** if no CD is inserted.
- Insert a CD with the printed side facing up and close the CD door.
 - Display: total number of tracks and playing time.
 - **TIME DISC** is shown if you have inserted a non-finalized CD-R(W).
- Press to start playback.
 - **CD DATA** if your CD contains non-audio files
- To pause playback press . Press again to resume play.
- To stop CD playback, press .

Note: CD play will also stop when:

- the CD door is opened
- the CD has reached the end
- you select tape or tuner source.

- Connect the power cord to the wall outlet.
- To disconnect the power supply, unplug the set from the wall outlet.

Auto-Standby mode

When a CD or tape has reached the end of playback and remains in the stop position for more than 15 minutes, the set will switch off automatically to save energy.

The type plate is located on the bottom of the set.

CD

Selecting a different track

- Press or on the set, once or repeatedly to select.
- In the pause/stop position, press to start playback.

Finding a passage within a track

- Press and hold or .
- The CD is played at high speed and low volume.
- When you recognize the passage you want, release or to resume normal playback.

Note: During a CD program or if shuffle/ repeat active, searching is only possible within a track.

Different play modes: SHUFFLE and REPEAT

You can select and change the various play modes before or during playback, and combine the modes with **PROGRAM**.

- shuffle** – tracks of the entire CD/ program are played in random order
- shuffle and repeat all** – to repeat the entire CD/ program continuously in random order
- repeat all** – repeats the entire CD/ program (and **shuffle repeat**) – plays the current (random) track continuously

- To select play mode, press **MODE** once or more.
- Press to start playback if in the stop position.
- To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
 - You can also press to cancel your play mode.

Programming track numbers

In the stop position, select and store your CD tracks in the desired sequence. Up to 20 tracks can be stored in the memory.

- Press or on the set to select your desired track number.
- Press **PROG**.
 - If you attempt to program without first selecting a track number, **NO SEL** is shown.
- Repeat steps 1-2 to select and store all desired tracks.
 - Display: **FULL** if you try to program more than 20 tracks.

*Note: To prevent sound interference the bass control options operate exclusively. You cannot combine the bass from **BASS** with **DBB***
→ The display shows **Search** or the **DBB** indicator is automatically switched off to remind you if you attempt to use both bass settings.

CASSETTE RECORDER

Reviewing the program

In the stop position, press and hold **PROG** until the display shows all your stored track numbers in sequence.

Erasing a program

You can erase the program by:

- pressing twice
 - **CL** is displayed briefly and **program** disappears.
- selecting **TAPE** or **TUNER** source.

CASSETTE RECORDER

Cassette playback

- Press to on, then **SOURCE** to select **TAPE**.
 - Display: shows **TAPE** throughout tape operation.
- Insert a cassette and close the door.
- Press **PLAY** to start playback.
- To pause, press **PAUSE II**. Press again to resume.
- Press **SEARCH** or to fast wind the tape.
- To stop the tape, press **STOP/OPEN** .
- The keys are automatically released at the end of a tape, except if **PAUSE II** has been activated.

CASSETTE RECORDER

GENERAL INFORMATION ON RECORDING

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- For recording, use only NORMAL type cassettes (IEC type I) on which the tabs have not yet been broken. This deck is not suited for recording on CHROME (IEC II) or METAL (IEC IV) type cassettes.
- The best recording level is set automatically. Altering the **VOLUME**, **DBB** or **BASS**, **MID** & **HIGH** controls will not affect the recording.
- To protect a tape from accidental erasure, break down the tabs from the Philips **Macro-Philes** Mats with a piece of adhesive tape.

MAINTENANCE & SAFETY

Maintenance & Safety

CD player and CD handling (See [\[6\]](#))

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the

TROUBLESHOOTING

WARNING

Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.

Remote control does not function properly (AZ 2055 only)

- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Distance/ angle between the set too large
- Reduce the distance/ angle

No sound /power

Recording does not work

- Cassette tab(s) may be broken
- Apply adhesive tape over the missing tab space

NO DISC / CL indication

- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance

- Laser lens steamed up

For **AM**, the set uses a built-in antenna. Direct this antenna by turning the whole set.

Programming radio stations

You can store up to a total of 30 radio stations in the memory, manually or automatically (Autostore).

Manual programming

- 1 Tune to your desired station (see Tuning to radio stations).
- 2 Press **PROG** to activate programming.
- 3 Press **PRESET DOWN/UP** once or more to select a preset number.
- 4 Press **PROG** to confirm.
- 5 Repeat steps 1-4 to store other stations.

Note: You can erase a preset station by storing another frequency in its place.

- close the CD door.
- Display: **total number of tracks** to repair time.
- **FF** **15C** is shown if you have inserted a non-finalized CD-R(W).
- 3 Press **▶II** to start playback.
→ **CD 15C** if your CD contains non-audio files
 - 4 To pause playback press **▶II**. Press **▶II** again to resume play.
 - 5 To stop CD playback, press **■**.
- Note: CD play will also stop when:*
- the CD door is opened
 - the CD has reached the end
 - you select tape or tuner source.

- 1 To select play mode, press **MODE** once or more.
- 2 Press **▶II** to start playback if in the stop position.
- 3 To select normal playback, press **MODE** repeatedly until the various modes are no longer displayed.
– You can also press **■** to cancel your play mode.

Programming track numbers

In the stop position, select and store your CD tracks in the desired sequence. Up to 20 tracks can be stored in the memory.

- 1 Press **◀** or **▶** on the set to select your desired track number.
- 2 Press **PROG**.
→ If you attempt to program without first selecting a track number, **NO SEL** is shown.
- 3 Repeat steps 1-2 to select and store all desired tracks.
→ Display: **FULL** if you try to program more than 20 tracks.

CASSETTE RECORDER

GENERAL INFORMATION ON RECORDING

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- For recording, use only **NORMAL** type cassettes (IEC type I) on which the tabs have not yet been broken. This deck is not suited for recording on **CHROME** (IEC II) or **METAL** (IEC IV) type cassettes.
- The best recording level is set automatically. Altering the **VOLUME**, **DBB** or **BASS**, **MID** & **HIGH** controls will not affect the recording.
- To protect a tape from accidental erasure, break out the tabs. If you wish to record again, cover the tabs with a piece of adhesive tape.

CD Synchro Start recording

- 1 Select CD function.
- 2 Insert a CD and if desired, program track numbers.
- 3 Open the cassette door.
- 4 Insert a suitable tape into the cassette deck and close the door.
- 5 Press **RECORD** **●** to start recording.
– Playing of the CD program starts automatically from the beginning of the program. You don't need to start the CD player separately.
→ To select and record a particular passage within a CD track:
 - Press **◀** or **▶**. Release the control when you recognize the passage you want.
 - To pause CD playback, press **▶II**.
 - Recording starts from this exact point in the track when you press **RECORD** **●**.
- 6 To pause recording, press **PAUSE II**. Press **PAUSE II** again to resume recording.
- 7 To stop recording, press **STOP/OPEN** **■▲**.

Recording from the Radio

- 1 Tune to the desired radio station (see Tuning to radio stations).
- 2 Follow steps 3-7, under Synchro Start CD recording.

MAINTENANCE & SAFETY

Maintenance & Safety

CD player and CD handling (See [6])

- If the CD player cannot read CDs correctly, use a cleaning CD to clean the lens before taking the set to repair.
- The lens of the CD player should never be touched!
- Sudden changes in the surrounding temperature can cause condensation on the lens of your CD player. Playing a CD is then not possible. Do not attempt to clean the lens but leave the set in a warm environment until the moisture evaporates.
- Always close the CD door to avoid dust on the lens.
- To clean the CD, wipe in a straight line from the center towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach any stickers to it.

Safety Information

- Don't expose the set, batteries, CDs or cassettes to humidity, rain, sand or excessive heat.
- Clean the set with a dry cloth. Don't use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the set.
- Place the set on a hard and flat surface so that the system does not tilt. Make sure there is good ventilation to prevent the set overheating.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.

Tape deck maintenance (See [7])

To ensure quality recording and playback of the tape deck, clean parts (A), (B) and (C) as shown, once a month. Use a cotton bud slightly moistened with alcohol or a special head cleaning fluid to clean the deck.

- 1 Open the cassette door.
- 2 Press **PLAY** **▶** and clean the roller (C).
- 3 Press **PAUSE II** and clean the heads (A), and the capstan (B).
- 4 After cleaning, press **STOP/OPEN** **■▲**.

TROUBLESHOOTING

WARNING

Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.

If a fault occurs, first check the points listed below before taking the set for repair.

If you are unable to remedy a problem by following these hints, consult your dealer or service center.

Remote control does not function properly (AZ 2055 only)

- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Distance/ angle between the set too large
- Reduce the distance/ angle

No sound /power

- Volume not adjusted
- Adjust the VOLUME
- Power cord not securely connected
- Connect the AC power cord properly
- Batteries dead/ incorrectly inserted
- Insert (fresh) batteries correctly
- Headphones connected to the set
- Disconnect headphones

Severe radio hum or noise

- Electrical interference: set too close to TV, VCR or computer
- Increase the distance

Poor radio reception

- Weak radio signal
- FM: Adjust the FM telescopic antenna

Poor cassette sound quality

- Dust and dirt on the heads, etc.
- Clean deck parts, see Maintenance
- Use of incompatible cassette types (METAL or CHROME)
- Only use **NORMAL** (IEC I) for recording

Environmental information

We have done our best to reduce the packaging and make it easy to separate into 3 materials: cardboard, expandable polystyrene, polyethylene.

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging, dead batteries and old equipment.

Recording does not work

- Cassette tab(s) may be broken
- Apply adhesive tape over the missing tab space

FF 15C / CD Err- indication

- CD badly scratched or dirty
- Replace/ clean CD, see Maintenance
- Laser lens steamed up
- Wait until lens has cleared

FF 15C indication

- CD-R(W) is blank/ not finalized
- Use a finalized CD-R(W)

CD 15C indication

- CD-ROM disc inserted/ CD contains non-audio files
- Use CD Audio discs only/ press **◀** or **▶** once or more to skip to a CD audio track instead of the data files

The CD skips tracks

- CD damaged or dirty
- Replace or clean CD
- SHUFFLE or PROGRAM is active
- Switch off SHUFFLE / PROGRAM

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

• Once your Philips purchase is registered, you're eligible to receive all the privileges of owning a Philips product.

• So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Envoyez votre carte d'enregistrement de garantie pour vous assurer de recevoir tous les avantages auxquels vous avez droit.

• Dès que l'achat de votre appareil Philips est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs des produits Philips.

• Remplissez et renvoyez votre carte d'enregistrement de garantie jointe à votre appareil sans tarder. Vous bénéficierez de ces avantages importants.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the

Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of

Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information

Vérification de garantie

Enregistrez votre produit dans les 10 jours pour confirmer votre droit à une protection maximum selon

Confirmation de possession

Votre carte d'enregistrement de garantie prouve que vous possédez l'appareil en cas

Enregistrement du modèle

Envoyez votre carte d'enregistrement de garantie dès aujourd'hui pour vous assurer de recevoir toutes les

 
PHILIPS CONSUMER ELECTRONICS NORTH AMERICA

Knoxville, Tennessee 37914-1810, U.S.A.

English

Français

Español

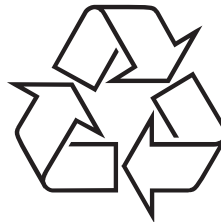

AZ 2050

AZ 2055

**CLASS 1
LASER PRODUCT**

3140 115 3038.1

